

Stone Linesman's Hut Kit

**4mm
(00 scale)
00-SMBKIT-3**

Dimensions
33.5 x 48 mm
Height 38.5 mm



Instructions


Remove parts 1-9 from the MDF fret and glue parts 2, 3 and 4 onto the base (part 1) keeping them as square as possible.

Glue the MDF roof on (part 9) and then slot the four sides into place and glue.

Lightly sand both sides of the plastic material with 240 grit paper (preferably on a sanding block) and then remove from the fret.

The shorter sides are made up of two layers. Glue these two pieces together using a solvent such as plastic weld.

Glue piece of glazing behind the window opening using a very small amount of pva glue.

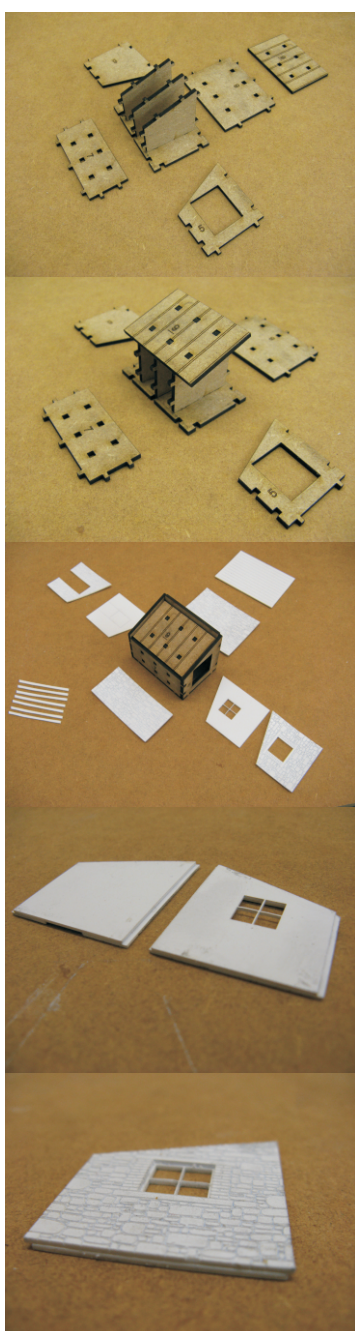

Start by glueing both short sides onto the MDF box, using superglue - followed by the long sides. Once all pieces are dry sand the faces so no edges protrude.

If there are any gaps left at the corners now is a good time to fill them and sand smooth.

Next glue the roof beams in place using the guide lines on part 9, making sure they are sitting perpendicular to the MDF roof.

Now glue the roof panel on with the etched lines facing up.

Now is a good time to paint the model.

The roof tiles are self adhesive. Start at the bottom of the roof and follow the planking lines, working your way up.

